




CONGRATULATIONS

on purchasing a DustShield™, the finest system available for protecting computer equipment in harsh environments.

These instructions provide the information you will need to setup the enclosure.


1. On Select Models, the door handles and the exhaust air vent cover have been mounted on the inside of the enclosure for shipping purposes. Please remove and reinstall on the outside.

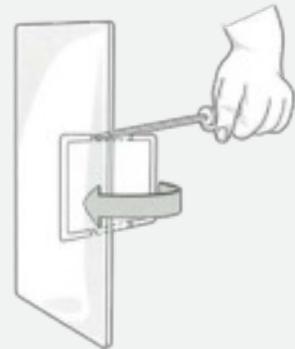


2. Place equipment into position inside the enclosure.




3. Cables entering or exiting the enclosure pass through a cable port, usually located on the back of the enclosure. If your cable ports came with a rubber grommet, simply use a utility knife to make two small incisions: creating the shape of an 'X' or '+' and run the cables through the space.

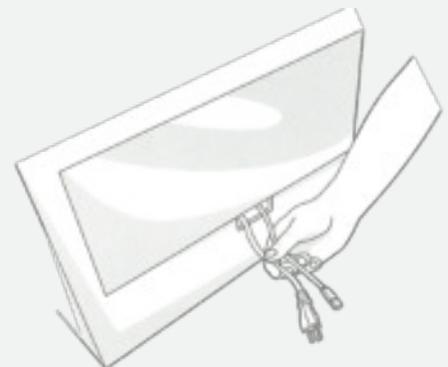

4. Mark the date for filter replacement.
(See Chart Below for Guidelines)

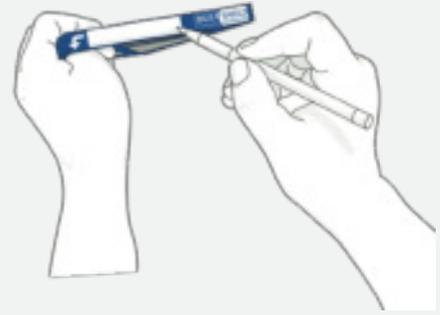

5. The filter side of the enclosure should have at least 2 inches of clearance for proper airflow. Make sure the filter is installed with the black side facing out.

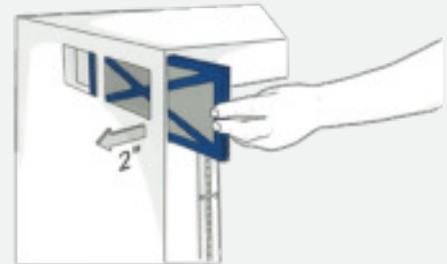

Scheduled filter maintenance and replacement ensures your mission critical hardware is protected.

Positive Pressure



A clean filter provides the proper airflow to:

1. Prevent any airborne particulates from entering the enclosure.
2. Remove the heat generated by the computer equipment.

Weekly Maintenance

1. Remove and inspect filter.
2. Brush any excessive contaminants from the black side of the filter.
3. Reinstall Filter

Filter Replacement

Filters should be replaced monthly or bi-monthly depending on the harshness of the production environment. Here are some examples of replacement schedules for some of our more common industries.

ENVIRONMENT	PRODUCTION FACILITY	REPLACE FILTER
Paper Dust	Paper Handling	bi-monthly
Large Particle	Woodworking	bi-monthly
Heavily Dusty	Concrete / Ready Mix	monthly
Oily Environment	Machine Shop	monthly
Carbon Laden	Transportation	monthly

Questions?

Have questions about your replacement schedule or about your new DustShield™ ?
Call us (800) 587-9557

